



## UNDERSTELL SOM PASSER TIL ZITZI SHARKY PRO

---

### Zitzi Delfi Pro str. 1

#### Guppy G2



Guppy G2 str. 3 manuell  
Art. nr.: 386610K  
HMS. nr.: 333529

#### Flipper G2



Flipper G2 str. 4 el./man. tilt  
Art. nr.: 844397K  
HMS. nr.: 333535

Flipper G2 str. 4 el./el. tilt  
Art. nr.: 844398K  
HMS. nr.: 333536

#### Flipper Flex G2



Flipper Flex G2 manuell  
Art. nr.: 844440K  
HMS. nr.: 333530

Flipper Flex G2 el.  
Art. nr.: 844441K  
HMS. nr.: 333531

Flipper Flex el./el. tilt  
Art. nr.: 844446K  
HMS. nr.: 333532

#### Zitzi Seabass G2



Seabass G2 str. 2 manuell  
Art. nr.: 386292K  
HMS. nr.: 333538

Seabass G2 Lav str. 2 manuell  
Art. nr.: 386297K  
HMS. nr.: 333541

---

### Zitzi Sharky Pro str. 2

#### Guppy G2



Guppy G2 str. 3 bred  
Art. nr.: 386615K  
HMS. nr.: 333537

Guppy G2 str. 3 bred/lav  
Art. nr.: 386755K  
HMS. nr.: 301455

#### Flipper G2



Flipper G2 str. 4 el./man. tilt  
Art. nr.: 844397K  
HMS. nr.: 333535

Flipper G2 str. 4 el./el. tilt  
Art. nr.: 844398K  
HMS. nr.: 333536

#### Zitzi Seabass G2



Seabass G2 str. 3 manuell  
Art. nr.: 386293K  
HMS. nr.: 333539

Seabass G2 Lav str. 3 manuell  
Art. nr.: 386298K  
HMS. nr.: 333542