


Hurtigguide Looky 10 HD

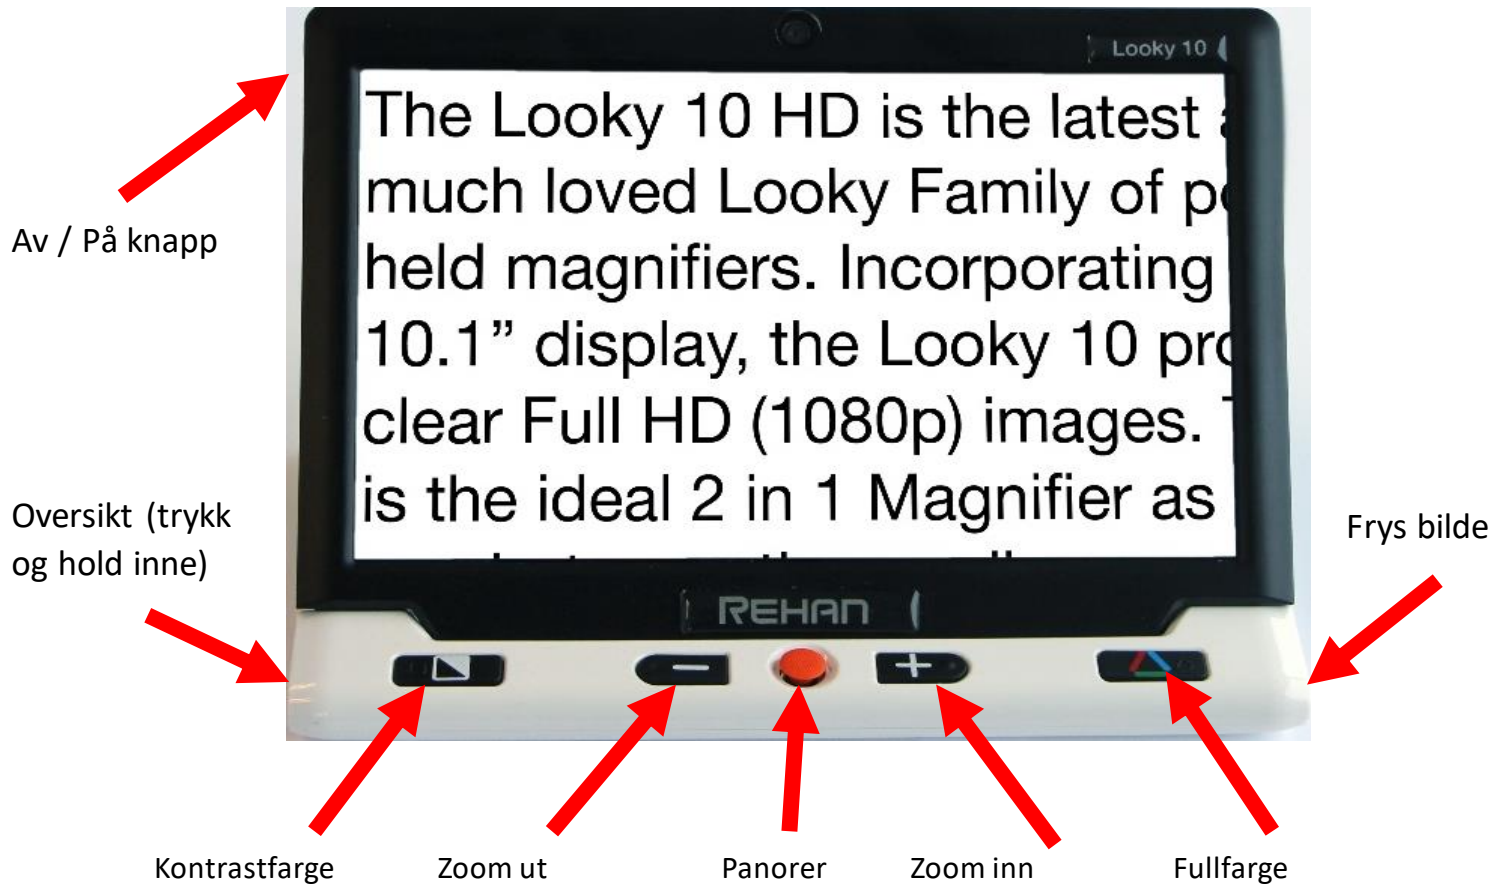

- | | | | |
|----|--|--------------------------|--------------------------|
| 11 | | 11. Power Button | 12. Power Port |
| 12 | | 13. HDMI Port | 14. <u>Locate</u> Button |
| 13 | | 15. <u>Freeze</u> Button | 16. <u>Camera</u> Switch |
| 14 | | 17. USB Port | |

