

UNDERSTELL SOM PASSER TIL ZITZI SHARKY PRO

Sharky Pro Str. 1



Flipper G2 str. 4



Flipper G2 str. 4 El./man. tilt

Art. nr.: 844308

HMS. nr.: 288374

Flipper G2 str. 4 El./el tilt

Art. nr.: 844322

HMS. nr.: 286574

Guppy G2 str. 3



Guppy G2 str. 3 manuell

Art. nr.: 386610

HMS. nr.: 293468

Flipper Flex G2



Flipper Flex G2 manuell

Art. nr.: 844340

HMS. nr.: 288368

Flipper Flex G2 El.

Art. nr.: 844341

HMS. nr.: 288369

Flipper Flex G2 El. hev/senk El. tilt

Art. nr.: 844346

HMS. nr.: 290237

Seabass str. 2



Seabass G2 str. 2 manuell

Art. nr.: 386792

HMS. nr.: 293471

Seabass G2 Lav str. 2 manuell

Art. nr.: 386797

HMS. nr.: 293474

Sharky Pro Str. 2



Flipper G2 str. 4



Flipper G2 str. 4 El./man. tilt

Art. nr.: 844308

HMS. nr.: 288374

Flipper G2 str. 4 El./el tilt

Art. nr.: 844322

HMS. nr.: 286574

Guppy G2 str. 4



Guppy G2 str. 4 manuell

Art. nr.: 386615

HMS. nr.: 293469

Flipper Flex G2



Flipper Flex G2 manuell

Art. nr.: 844340

HMS. nr.: 288368

Flipper Flex G2 El.

Art. nr.: 844341

HMS. nr.: 288369

Flipper Flex G2 El. hev/senk El. tilt

Art. nr.: 844346

HMS. nr.: 290237

Seabass str. 3



Seabass G2 str. 3 manuell

Art. nr.: 386793

HMS. nr.: 293472

Seabass G2 Lav str. 3 manuell

Art. nr.: 386798

HMS. nr.: 293475