


Please exercise care in handling the QuadStick.

The joint at the base of the joystick is fragile and can be broken if the QuadStick is dropped or mishandled.

Do not attempt to push the joystick mouthpiece sideways beyond the limits of its motion.

Do not apply sideways force to the pressure sensor tube on the right hand side.

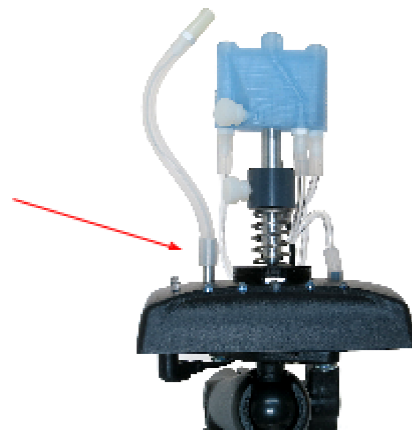



Declaration of Conformity

In accordance with EN ISO/IEC 17050-1:2010

Manufacturers Name: QuadStick
Manufacturers Address: 1823 2nd Avenue North
Great Falls, Montana 59401-3227
U.S.A.

Application of Council Directives:

Low Voltage 2006/95/EC
EMC 2004/108/EC

Standards:

EMC EN55022:2010
EN55024:2010
Safety IEC 60950-1:2005
EN 60950-1:2006



Product Name: QuadStick

Product Model Number: QuadStick Model One

We, the undersigned, hereby declare that the equipment specified above conforms to the above Directives and Standards.

Location: GREAT FALLS, MT USA Signature: 
Date: 17 JUNE 2014 Full Name (print): FREDERICK G DAVISON
Title: OWNER

PlayStation Quick Start

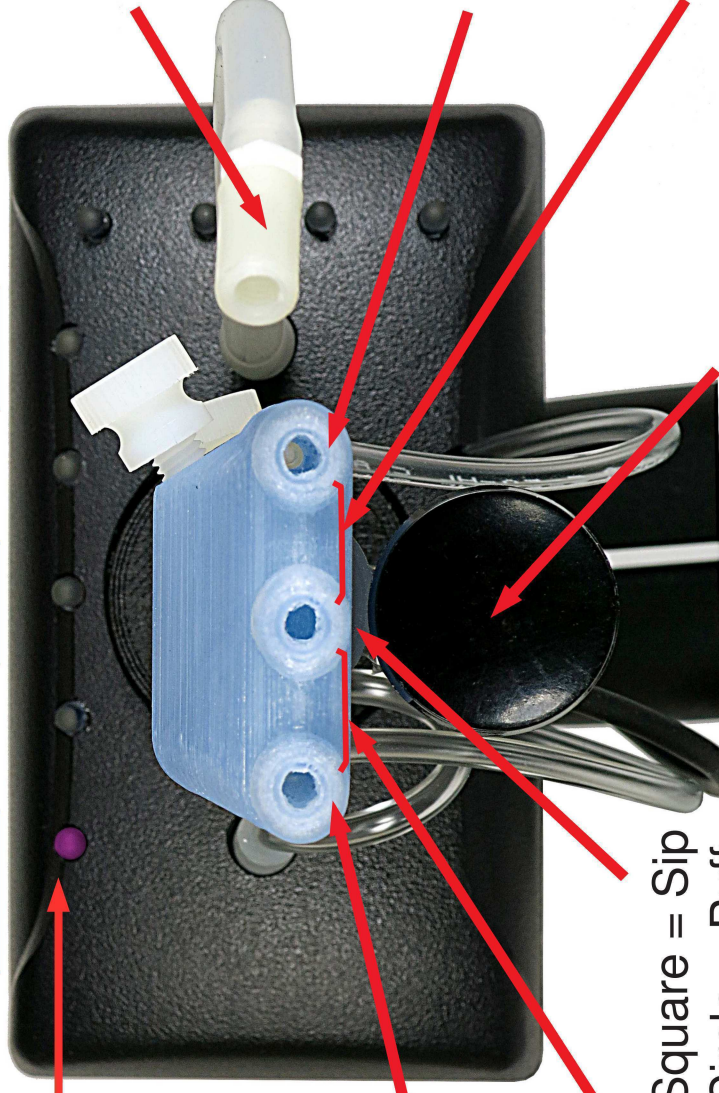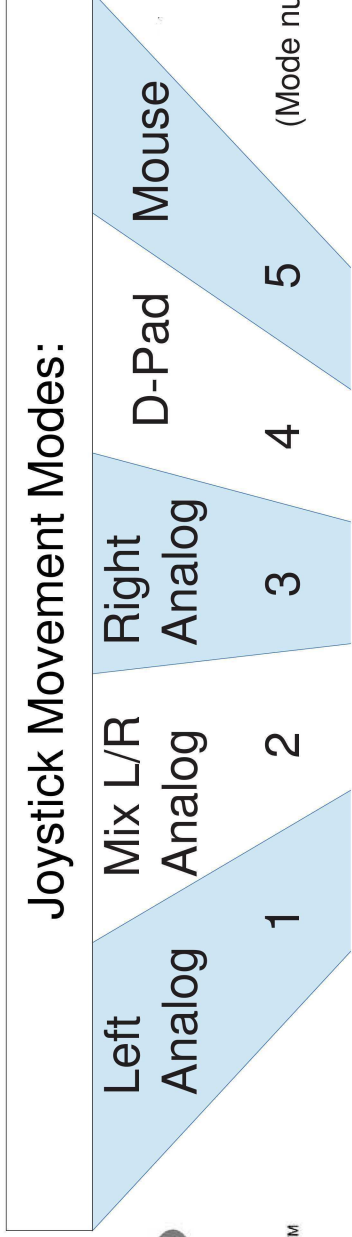

Next Mode = Sip
Previous = Puff

R1 = Sip
R2 = Puff
Start = Soft Sip

R3 = Sip
Triangle = Puff

Selected Mode LEDs

L1 = Sip
L2 = Puff
Select = Soft Sip

Square = Sip
Circle = Puff
Home (PS3) = Soft Sip
X = Lip

L3 = Sip

PlayStation 4



Basic connection

“Enable Boot in PS4 Mode” must be selected in QMP.

If you selected PS4 as your primary console when ordering, your Quadstick is set up this way



Do not turn on DS4

There will be a very brief interruption every 7 minutes if the DS4 is not plugged into USB A.



- Turn on PS4 from the FRONT PANEL, not from the controller.
- Plug CronusMax into console.
- If CM display shows 0, then use “Partial Crossover” connection.
- If CM display shows flashing A/U, then use “Full Crossover” connection, then it will display 0.



Partial Crossover connection
Brief interruption every 7 minutes



FULL Crossover connection
with USB hub.
No interruptions



Do not turn on DS4



UltraStik 360 and Mayflash F300 Fight stick are supported on USB A port





XBOX

Quick Start

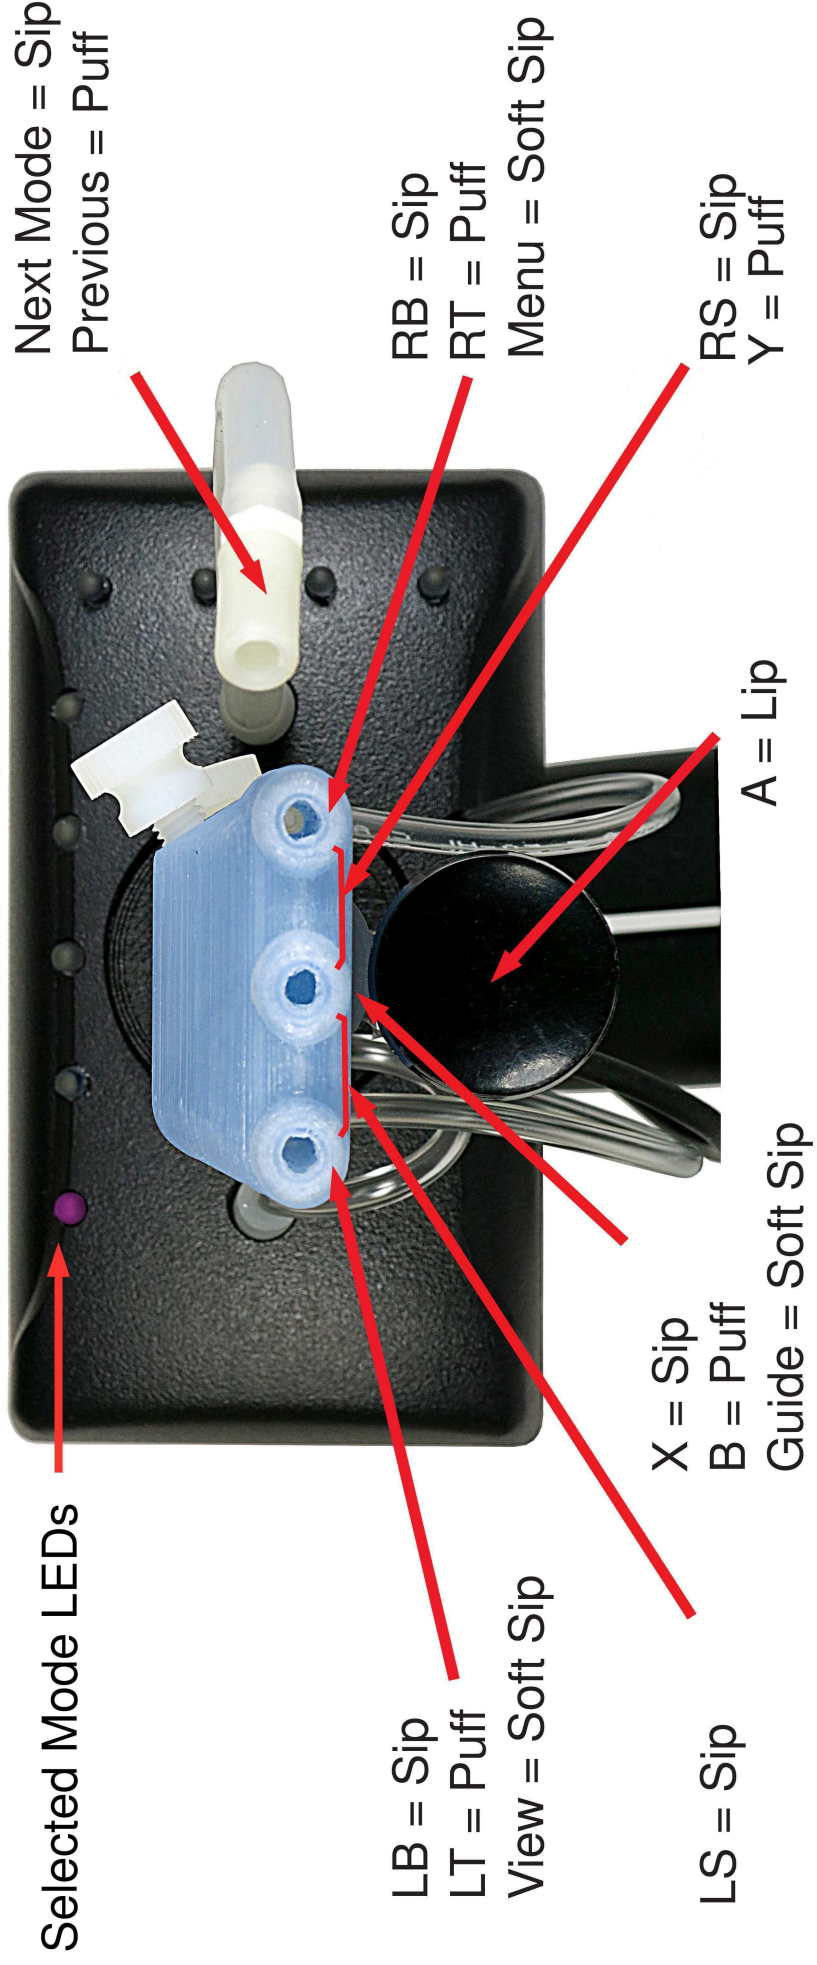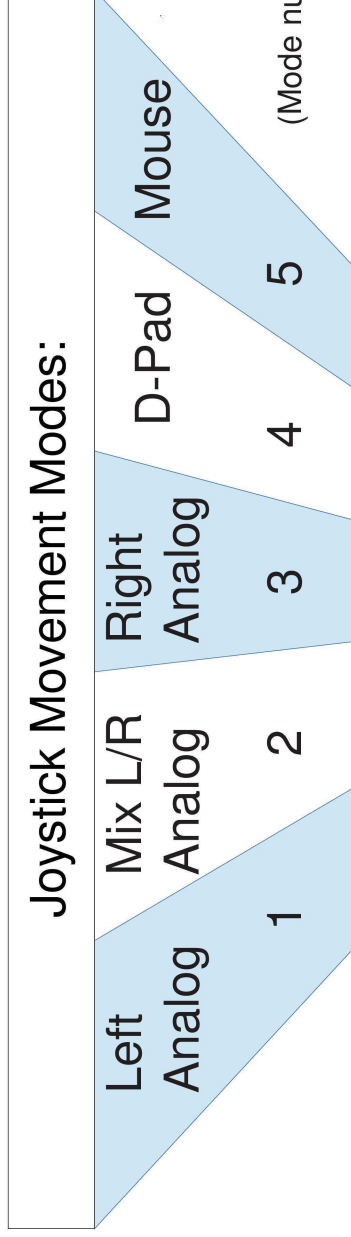


XBox One



Brooks Super Converter



CronusMax

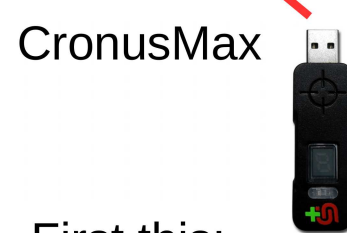

First this:



(remove batteries)

then this:



- Start with XBox One console OFF.
- Remove the batteries from the XBox One controller.
- Turn on XBox One from the FRONT PANEL, not from the controller.
- Plug CronusMax into console.
- Observe alternating A/U on display.
- Plug XBox One controller into CronusMax Input port. DO NOT turn controller on.
- Observe steady 0 on display.
- CronusMax is now “authorized” until power is removed.
- Unplug wireless controller. Leave OFF. Do not use as secondary controller.
- Plug in QuadStick with cable from USB B port to CronusMax Input port

UltraStik 360 and Mayflash F300 Fight stick are supported on USB A port



QuadStick

Dear New QuadStick Owner:

Some tips to help you with your new QuadStick:

- When the QuadStick starts up it is running the “Default” configuration which is depicted in the Quickstart Guide. Stick the guide up where you can see it as you learn which Sip/Puff combinations to use to control games. The back of the guide shows how to connect the QuadStick to a PS or XBox game console.
- Reference cards for the Default PlayStation, Xbox and PC Mouse and other game configurations are included which have a tab that can be sandwiched between the back of the QuadStick and the Ram Mount ball adapter to hold the card just above the top of the QuadStick.
- The QuadStick is also great mouse for a computer. Just plug it in to the PC, Sip on the right side tube to increment to the Mouse mode (5) and try it. An alternative mouse configuration is available in Mouse2.
- The QuadStick is fully configurable: Any Sip, Puff or Joystick movement, or any combination or sequence of them can be mapped to any game controller, mouse, or keyboard button. You can create your own configuration files or download new ones from the QuadStick website.
- Important website addresses:
 - <http://quadstick.com>
 - <http://config.quadstick.com> Configuration worksheets folder
 - <http://ps4.quadstick.com> PS4 setup instructions for CronusMax
 - <http://xbox.quadstick.com> XBox setup instructions for CronusMax

(over)

- The QuadStick is shipped with a set of configuration files stored on its Flash drive:

Initial Set of Configuration Files

(and how to switch between them)

The user can switch between the configuration files at any time by Sipping firmly on the Side tube and holding until a "Boing" sound is heard and one of the LEDs will flash rapidly. This indicates the File Selector function is active.

Move the Joystick right and left. The flashing LED will indicate the index number for the file that will be loaded. The LEDs are numbered from left to right, one to five.

When the LED corresponding to the desired file is flashing, push the Lip button to load the new file. A second "Boing" will be heard and the file will be active.

The file list is sorted alphabetically, except for "default.csv" which is always file number 1.

LEDs	File Number	Filename	Online Configuration Sheet	Notes
█	1	default.csv	Default	Generic game controller and mouse
	2	destiny.csv	Destiny	Many First Person Shooter games
	3	ds3.csv	Dual Shock 3	Full gyro & accelerometer access
	4	forza5.csv	Forza Motorsports 5	XBox One
	5	journey.csv	Journey	PS3 & PS4
█	6	mouse.csv	Mouse2	PC
	7	portal2.csv	Portal2 - Steam	PC game
	8	rcktlgx.csv	Rocket League X360CE	PC game
	9	switch.csv	Nintendo Switch	
	10	x360pc.csv	XBox 360 for PC mode	PC games

- If you get stuck or have any questions, call 1-406-205-4044

Fred Davison