



The talking book
player for the visually
impaired

For your reading pleasure!

PLEXTALK[®]
PTN2 series

What is DAISY?

The DAISY format allows a person to read and navigate through talking books. Library services for visually impaired people have converted their titles into the DAISY format. In order to read DAISY formatted books, PLEXTALK has developed DAISY players since the 1990's, becoming today's world-leading provider of DAISY players.



With the PLEXTALK® PTN2

You can read the content from a CD, SD card or USB storage device, thus ensuring compatibility with existing standards. Voice guidance helps you through all the necessary actions.

The text-to-speech voice also reads text and MS-Word files. You can enjoy your books in bed and still have a good night's rest thanks to the sleep timer function.

Without the Cover

you can set bookmarks, adjust speed, use the search function, customize the player, and much more...





Shift levels and move sessions

The PTN2 Cross Cover opens up the navigation keys, allowing you to move through chapters, paragraphs or phrases.

Get there easily with the New PLEXTALK PTN2 Cross

It allows you direct access to the DAISY functionalities, whether you are reading a newspaper, magazine or book.



More intuitive operation

The cover reveals a few keys, offering only intuitive operations, such as those on a CD player.

Enjoy reading with the PLEXTALK PTN2

You can listen to DAISY books, but also to documents and music in MP3 and all other major sound formats.



→ High sound quality

The PTN2 is Hi-Fi speaker optimized to provide a clear sound, even of human voices. The rubber slot-in disc mechanism prevents the disc from scratching during inserting or ejecting.

→ Shock resistant

Even when dropped from a height of 70 cm, the internal stabilizers and rubber edges of the PTN2 absorb shocks, keeping your book player up and running.

→ Water proof

The rubber keypad offers protection against liquids.



DAISY/e-text playback

- Advanced navigation functions in heading, group, page, phrase, bookmark, album, track, level, screen, paragraph, line, sentence, spell, word or character (Depending on the content structure)
- Reading Microsoft Word DOC, plain text, html or DAISY text by text-to-speech
- Audio files: MP3, unprotected WMA, AMR-WB+, Ogg Vorbis, Wave (PCM) formats, Music CDs (CD-DA)
- Bookmarks: maximum 10,000 items
- The playback speed can be changed from 0.5 to 3 times true speed. The tone can be changed from -6 to +6.

Intuitive operations


- Cross key layout with the PTN2 Cross or Simple key layout with the PTN2 Standard. In both cases the full key layout is accessible when the cover is removed.
- Use the PTN2 Cross key layout to navigate easily, or the simple key layout for easy and intuitive use of the PTN2; remove either cover for full-option.
- The sleep timer function turns the player automatically off at a set time.
- Voice guides help the user through all key operations and menu items.
- Key description mode
- Built-in user's guide in DAISY format

Flexible data management

- Compatible with SDHC, supporting up to 32GB
- Plays content on USB flash memory drives with USB 2.0 high speed.
- A DAISY CD can be recorded onto an SD card or a USB device. Recordings between SD card and USB devices are also possible.

Reliable design

- Specially optimized High-Fidelity sound
- Integrated speaker
- Audio out by 3.5 mm stereo mini jack
- Rubber slot-in disc mechanism to prevent disc scratching
- Shock resistant design by rubber stabilizers for the CD-ROM drive and three-dimension rubber edges
- Waterproof rubber keypad
- Operation time with replaceable battery: 5 hours playback of DAISY CD, 8 hours playback of SD Card Memory. – Charging time of 4 hours
- AC adapter: 100V-240V, 50/60 Hz
- Size: 225 x 180 x 63 mm or 8.86 x 7.1 x 2.5 inches. (W/H/D) with cover, less than 1.35 kg / 3 lb.

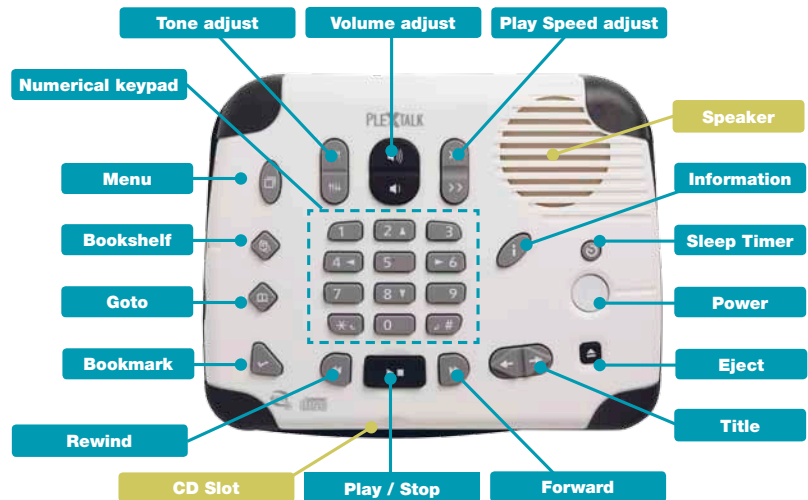

Carry bag (Option)

With the carry bag specially designed for the PTN2, you can take your DAISY player with you, wherever you go.



PLEX TALK[®]
www.plextalk.eu